GDS25A, GDS25, GDS33, GDS26, GDS27

## **PIPEWORK**



These pipework are used to connect the venting blanket and direct the gas to the outlet point. They are also used to carry the gas around the perimeter of the building to the gas vent mat connector points and finally to the outside for discharge.



Tel: 01622 738787

E-mail: orders@gdsenterprise.com

Information contained within this technical datasheet is for guidance only. Correct Installation guidance & specification should be sought from the specifier, ground engineers or the structural engineers to ensure the unit is suitable for the intended location.